



Manual-WEG-HE-Z-LV-Z HE-Z-50/70/100, LV-Z-1050 External Circuit Box c/w WEG Variable Speed Drive Installation



For the Installation of:

Part Name	Description	Part Number
HE-Z Electrical Box w/ 110v WEG Controller	Upgrade for HE-50/70/100 LV-E-1050 Air Handlers (110v power)	WEG Zoning-Ready Controller, PSB Circuit Board, Transformer in Powder Coated Box 40120100004

Part Name	Description	Part Number
HE-Z Electrical Box w/ 220v WEG Controller	Upgrade for HE-50/70/100 LV-E-1050 Air Handlers (220v power)	WEG Zoning-Ready Controller, PSB Circuit Board, Transformer in Powder Coated Box 40120100005

Manufactured By



External Circuit Box Installation

IMPORTANT - Before you begin, ensure input voltage of WEG Controller matches line input voltage to air handler.




Fig. 1 - HE/LV-E Air Handler

← Middle Access Door

← Large Access Door

1. Turn off power to the air handler, and allow 5 minutes for power stored in capacitors to dissipate. Remove middle and large access doors from air handler. (Fig. 1)

2. Unplug motor plug from control board and remove from L-Shaped box. Plastic grommet can be removed by squeezing the sides with needle nose pliers. (Fig. 2)

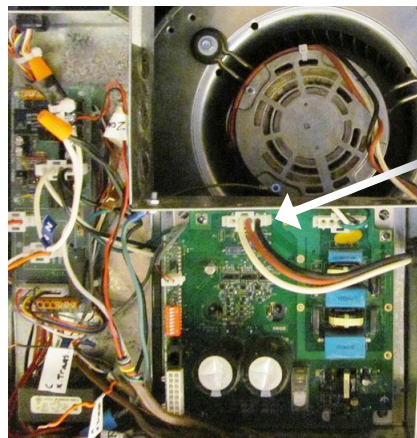

← Motor Plug

← Plastic Grommet

Fig. 2 - L-Shaped Box

3. Disconnect motor ground wire from L-Shape box. Using existing machine bolt, connect motor ground wire to provided ground wire extension. (Figs. 3a-3c)

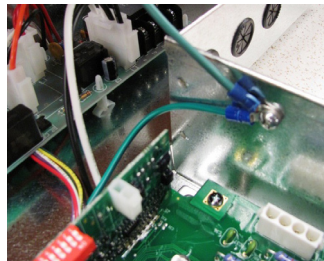


Fig. 3a

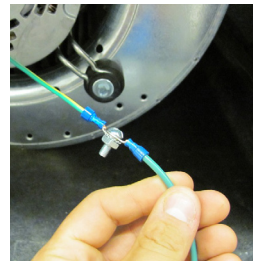


Fig. 3b

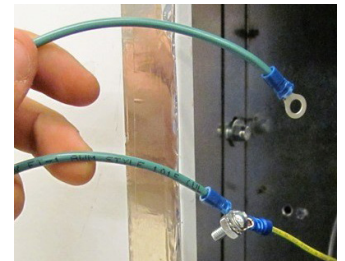


Fig. 3c

4. Insert ground wire extension into 4-prong motor plug. (Figs. 4a, 4b)

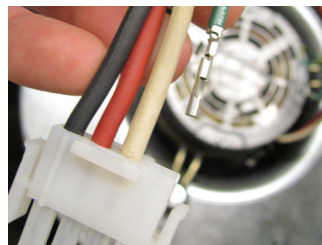


Fig. 4a - Ground Wire Extension

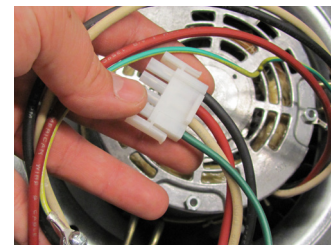


Fig. 4b - Motor Plug

External Circuit Box Installation

5. Remove all thermostat and power wiring from the air handler. Undo screw on L-Shape box and remove box from air handler. (Fig. 5a)

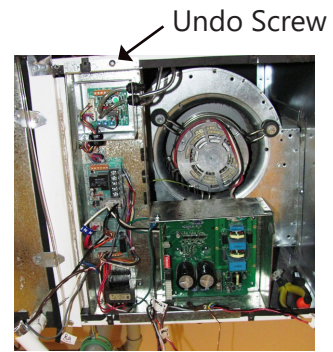


Fig. 5a - Undo Screw

(To use MANUAL Mode, or for Circuit Boards without pressure tubes, skip to step 8)

6. Drill hole in the center plate of the air handler, for the provided rubber grommet. (Figs. 6a, 6b)

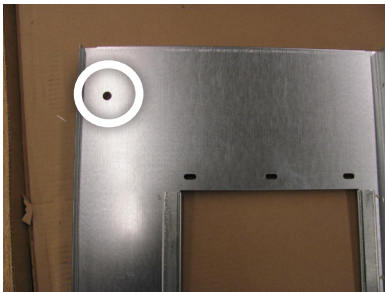


Fig. 6a

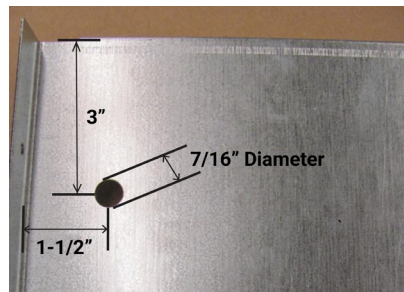


Fig. 6b

7. Install provided rubber grommet into the drilled hole. (Figs. 7a, 7b)



Fig. 7a



Fig. 7b

8. Replace middle access door of air handler. (Fig. 8)



Fig. 8

(To use MANUAL Mode, or for Circuit Boards without pressure tubes, skip to step 10)

9. Pull the positive (+) pressure tube through the rubber grommet in the bottom of the box (Fig. 9a) and connect the end of the tube to the center plate bulk head. (Fig. 9b)



Fig. 9a

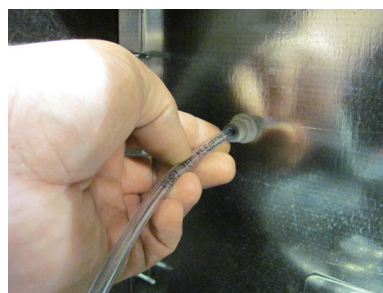


Fig. 9b

External Circuit Box Installation

- 10.** Plug in the 4-prong motor plug (male) into the female connection on the bottom side of the external box. (Figs. 10a-10c)

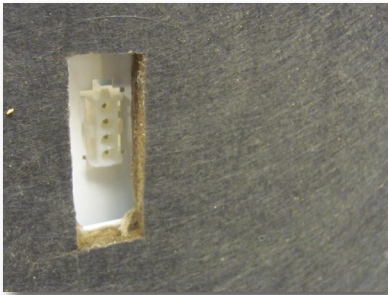


Fig. 10a

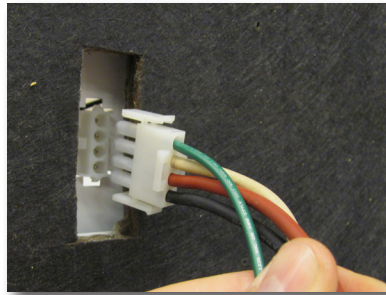


Fig. 10b

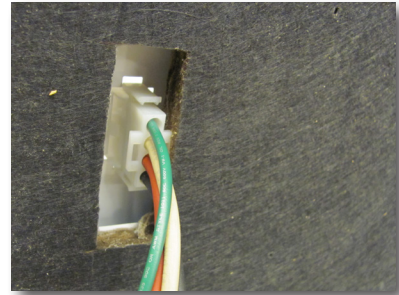


Fig. 10c

- 11.** Using 5/16" nut driver, secure external box to air handler in place of the large door, using screws provided in all four corner holes. (Fig. 11)

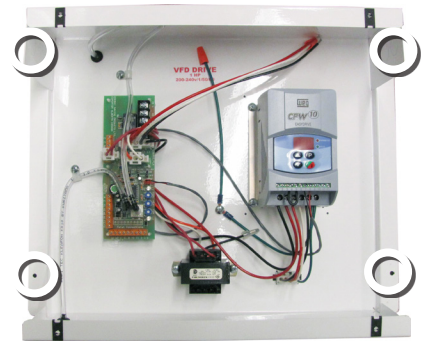


Fig. 11

- 12.** Re-wire thermostat connections, line in and ground wires to the air handler. (Figs. 12a, 12b)

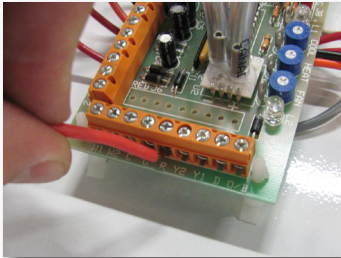


Fig. 12a

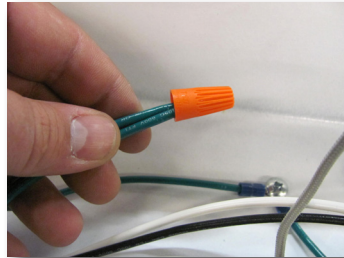


Fig. 12b

- 13.** Double check that all wires and wiring harnesses are connected. (Fig. 13)

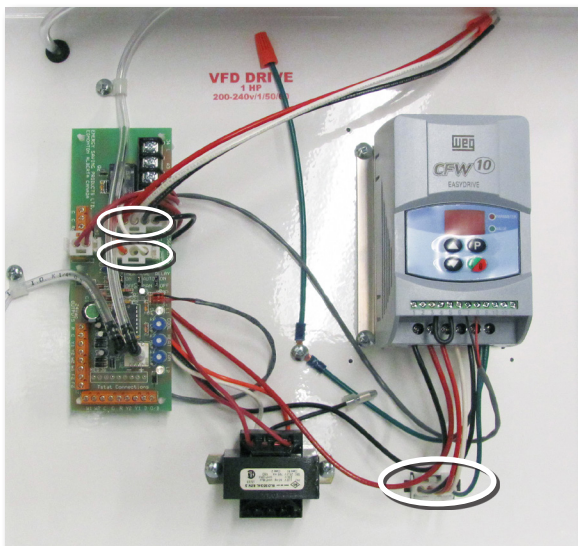


Fig. 13

- 14.** Install the provided large door on newly installed box. (Fig. 14)



Fig. 14

Quick Reference Guide

Quick System Setting Reference

	Hertz Output	Outlet Velocity	Static Pressure
Cooling Mode:	55-66 Hz	1250-1400 FPM	0.8-1.2"wc
Heating Mode:	45-66 Hz	1100-1400 FPM	0.6-1.2"wc
Constant Fan:	25-35 Hz	500-900 FPM	0.2-0.5"wc

Notes:

- Hertz will be displayed on the Variable Frequency Drive digital display.
- Outlet velocity is based on ideal noise levels.
- Static Pressure reading must be taken perpendicular to airflow, minimum of 18" away from supply air collar of air handler.
- Quick references should only be used to roughly set air handler, not to be used as primary air handler set up method.

Fan Adjustment Trim Pots




Increase Airflow (Clockwise)



Decrease Airflow (Counter Clockwise)

Jumper Pin Settings

H1 Emergency Disconnect:	(Remove pin to activate)
H2 Timer:	Activates auxiliary relay for 5 min every 24 hours.
H3 Mode (Auto):	Blower output speed modulates dependent upon static pressure.
H3 Mode (Manual):	Blower output speed operates at fixed flow rate.
H4 Delay:	Cooling/20second, heating/30 second fan delay, and 30 second post purge.

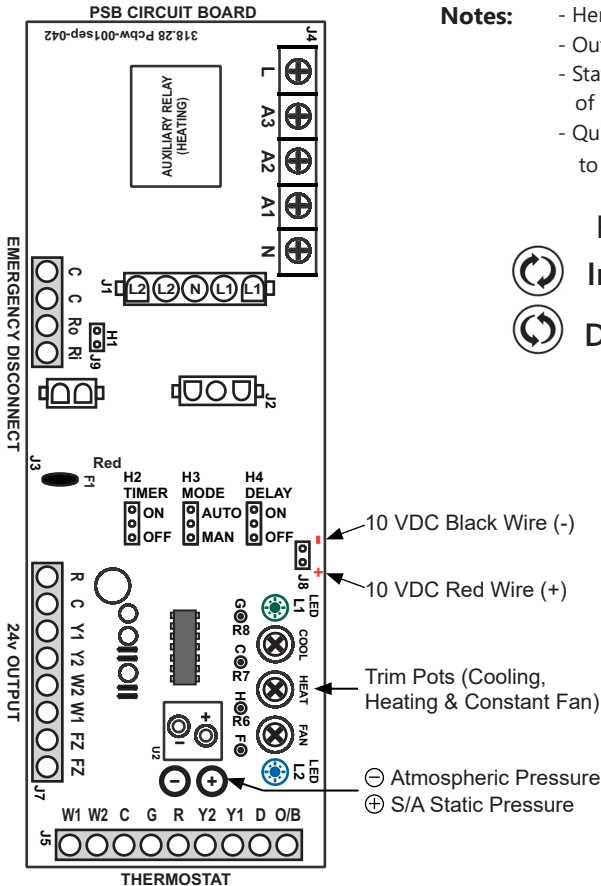

HE-Z/LV-Z Air Handler - PSB Circuit Board/CFW300 WEG Wiring Diagram



PLEASE NOTE: CFW10 has slightly different appearance, terminals and wiring are the same.

NOTE: CFW10 HAS SLIGHTLY DIFFERENT APPEARANCE - TERMINALS AND WIRING ARE THE SAME

CFW300 HE-Z / LV-Z / VFD

- THERMOSTAT CONNECTIONS**
- R - 24 VAC OUTPUT
 - W1 - FIRST STAGE HEAT
 - W2 - SECOND STAGE HEAT
 - (OR SINGLE STAGE)
 - Y1 - FIRST STAGE COOLING
 - Y2 - SECOND STAGE COOLING
 - (OR SINGLE STAGE)
 - C - 24 VAC COMMON
 - G - THERMOSTAT FAN SWITCH
 - D - PRIORITY (RUNS AT W SPEED)
 - O/B - HEATPUMP REVERSING
- EMERGENCY DISCONNECT**
- C - 24 VAC COMMON
 - R0 - 24 VAC OUTPUT
 - R1 - 24 VAC OUTPUT
- AUXILIARY HEATING RELAY**
- N - NEUTRAL
 - L - LINE VOLTAGE
 - A1 - AUXILIARY NORMALLY OPEN
 - A2 - AUXILIARY NORMALLY CLOSED
 - A3 - AUXILIARY COMMON
- 24 VAC OUTPUT CONNECTIONS**
- FZ - FREEZE STAT
 - W1 - HEATING (W1) 24 VAC OUTPUT
 - W2 - HEATING (W2) 24 VAC OUTPUT
 - Y2 - CONDENSING UNIT 24 VAC OUTPUT
 - C - 24 VAC COMMON
 - R - 24 VAC OUTPUT
- JUMPER PIN SETTINGS**
- H1 EMERGENCY DISCONNECT: REMOVE PIN IF WIRED TO EMERGENCY DISCONNECT
 - H2 TIMER: AUXILIARY RELAY TIMER (SEE NOTES)
 - H3 MODE:
 - AUTO - FAN SPEED MODULATES DEPENDING UPON STATIC PRESSURE
 - MANUAL - FAN SPEED OPERATES AT TRIM POTS SET AIR FLOW
 - H4 DELAY: Y20 AND W30 SECOND FAN DELAY. Y AND W 30 SECOND POST PURGE.
- LED LIGHT INDICATORS**
- LED 1 - GREEN LIGHT, PUMP TIMER OPERATION MODE INDICATOR
 - LED 2 - BLUE LIGHT, PRESSURE SENSOR

POWER INPUT: 110-127/1150-60

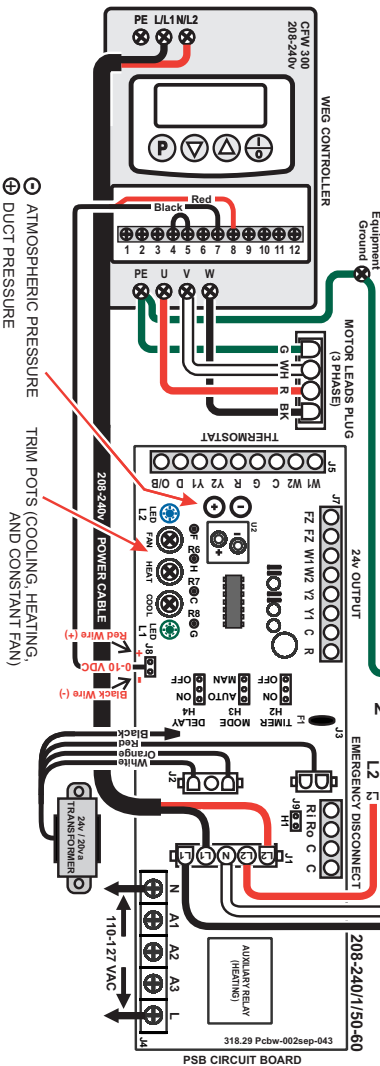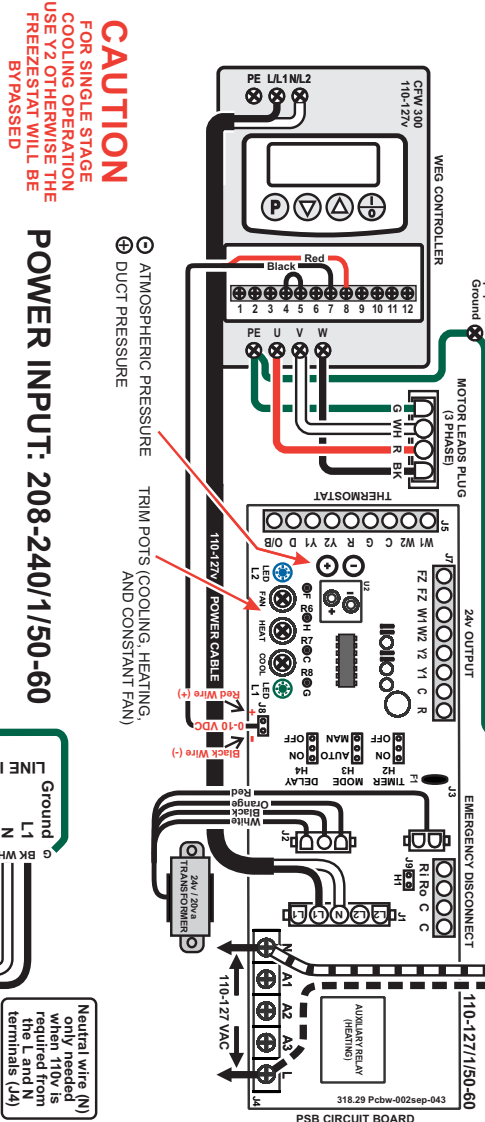

NOTES:

- 1) USE THERMOSTAT FAN SWITCH TO DISABLE/ENABLE CONTINUOUS FAN.
- 2) 'C' TERMINAL ON THERMOSTAT (COMMON) IS NOT NEEDED FOR SOME THERMOSTATS CONSULT THERMOSTAT INSTRUCTIONS FOR DETAILS.
- 3) W1 AND W2 ACTIVATES AUXILIARY RELAY (A3) ON CALL AND CAN BE USED WITH A1 AND/OR A2 AS DRY CONTACTS, ARMED 24VAC FROM THE 'R' TERMINAL, OR ARMED 110V FROM THE 'L' TERMINAL.
- 4) AUXILIARY HEATING RELAY TIMER ACTIVATES CIRCUIT FOR 5 MINUTES EVERY 24 HOURS STARTING WHEN POWER IS APPLIED TO THE UNIT.
- 5) LED 1: INDICATOR LIGHT FOR FAN SPEED OPERATION AND AUXILIARY RELAY OPERATION. SEE BELOW FOR LIGHT OPERATION SEQUENCE.
- 6) SEE INSTALLATION MANUAL FOR MORE DETAILED WIRING DIAGRAMS.
- 7) **FOR SINGLE STAGE COOLING OPERATION USE Y2, OTHERWISE THE FREEZE STAT WILL BE BYPASSED.**
- 8) FAILURE TO SET PROPER AIR FLOW AND/OR OPERATION OF THE SYSTEM MAY RESULT IN DAMAGE TO EQUIPMENT.
- 9) FAILURE TO READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION COULD CAUSE PERSONAL INJURY AND/OR PROPERTY DAMAGE.
- 10) ENSURE THAT THE FILTER IS KEPT CLEAN AT ALL TIMES.
- 11) MOTOR HAS PERMANENT LUBE BEARINGS AND DOES NOT REQUIRE OILING.
- 12) WARRANTY VOID IF FAN COIL UNIT IS USED DURING CONSTRUCTION.

PUMP TIMER/OPERATION MODE INDICATOR LIGHT SEQUENCE

PUMP TIMER STATUS	FAN OPERATION MODE
ON: (ACTIVE)	G
ON: (INACTIVE)	W
OFF:	Y
	D

LED 2: PRESSURE SENSING INDICATOR (BLUE LIGHT)

H3 JUMPER PIN: AUTO OR MANUAL MODE

AUTO MODE: LED 2 WILL SPORADICALLY FLICKER (ON/OFF) TO SHOW THAT IT IS PROPERLY SENSING PRESSURE IN THE SYSTEM.

- * NO LIGHT INDICATES TRIM POT IS ABOVE NORMAL OPERATING RANGE (COUNTER CLOCKWISE DECREASE).
- * SOLID LIGHT INDICATES TRIM POT IS BELOW NORMAL OPERATING RANGE (CLOCKWISE, INCREASE).

MANUAL MODE: LED 2 WILL BE OFF, ADJUST EACH OF THE AIR FLOWS TO DESIRED CFM/LPS OUTPUT.

ADJUSTING TRIM POTS: ON POWER START UP, ALLOW 45 SECONDS FOR SYSTEM TO PRESSURIZE BEFORE MAKING ANY CHANGES.

DO NOT ADJUST MORE THAN A 1/2 TURN AT A TIME, ALLOW 30 SECONDS BETWEEN ADJUSTMENTS FOR THE PSB TO REACH SET POINT.


FAN ADJUSTMENT TRIM POTS

- INCREASE AIR FLOW (CLOCKWISE)
- DECREASE AIR FLOW (COUNTER CLOCKWISE)

REFER TO COMPLETE COMMISSIONING REPORT PRIOR TO NORMAL OPERATION. REPORT IS AVAILABLE WITH THE INSTALLATION MANUAL OR ONLINE AT WWW.HI-VELOCITY.COM


HE-Z Air Handler - Extended Wiring Diagrams

Extended wiring diagrams for the various applications the Hi-Velocity HE-Z model can be used for. If you do not find the wiring configuration you require, please call the technical department at Energy Saving Products Ltd. for further assistance.

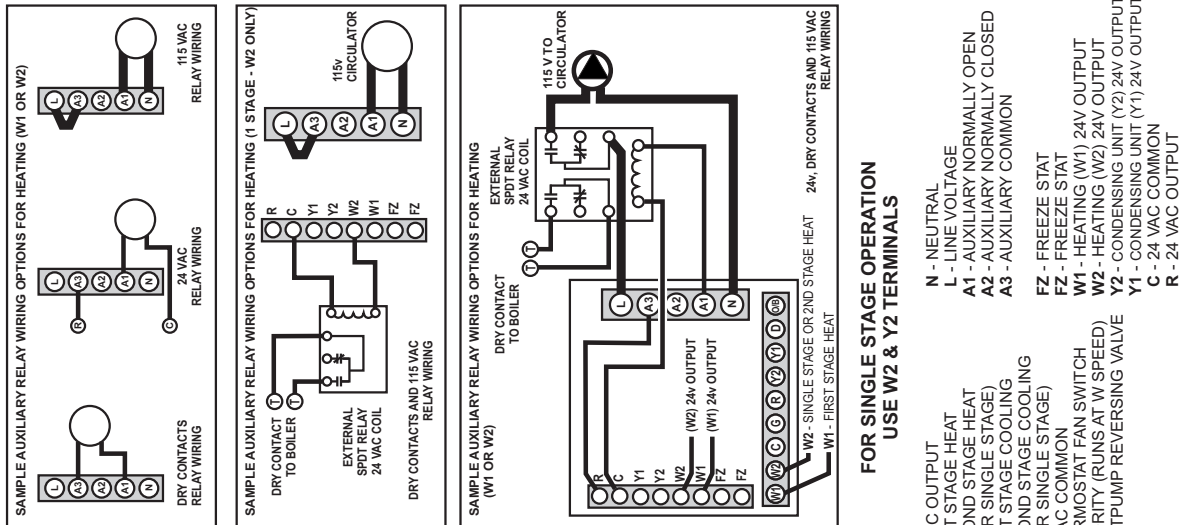


HE-Z-LV-Z-Extended-Wiring-Pg-1-082615


1 Stage Cooling 2 Stage Heating Heatpump

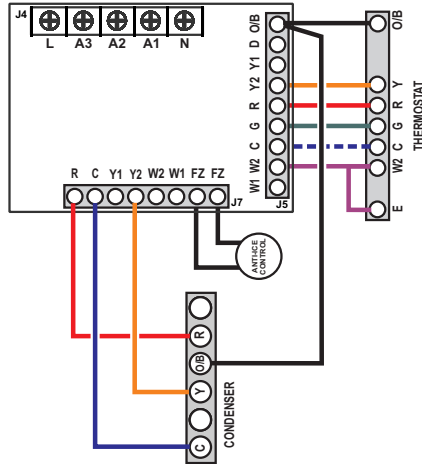


2 Stage Cooling 3 Stage Heating Heatpump

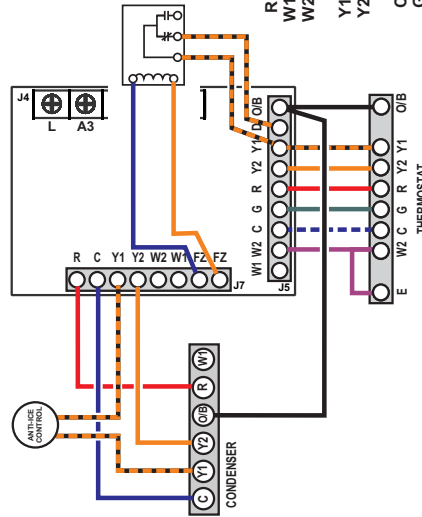

1 Stage Cooling 1 Stage Heating

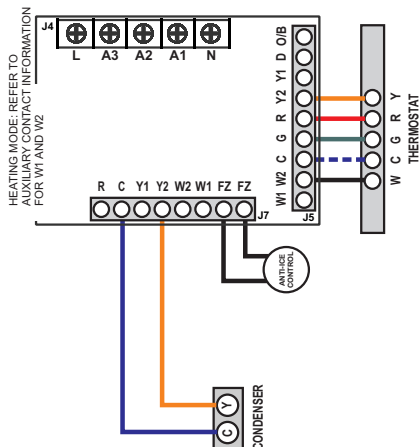


2 Stage Cooling 1 Stage Heating

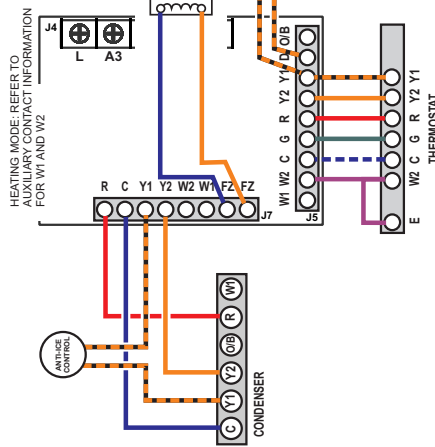


HE-Z Air Handler - Extended Wiring Diagrams

Extended wiring diagrams for the various applications the Hi-Velocity HE-Z model can be used for. If you do not find the wiring configuration you require, please call the technical department at Energy Saving Products Ltd. for further assistance.


1 Stage Cooling c/w chilled water circulator

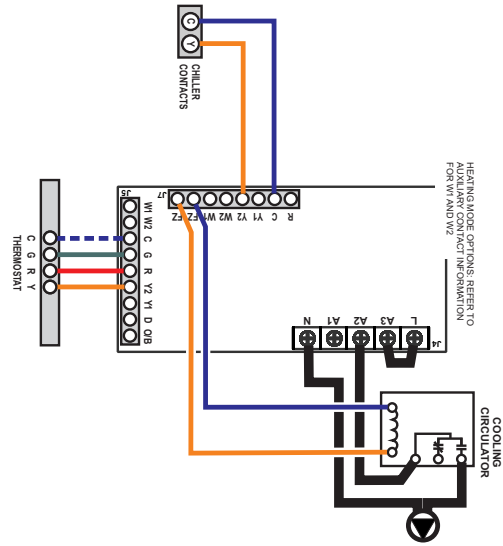

CHILLED WATER WIRING 2 Stage Cooling c/w chilled water circulator

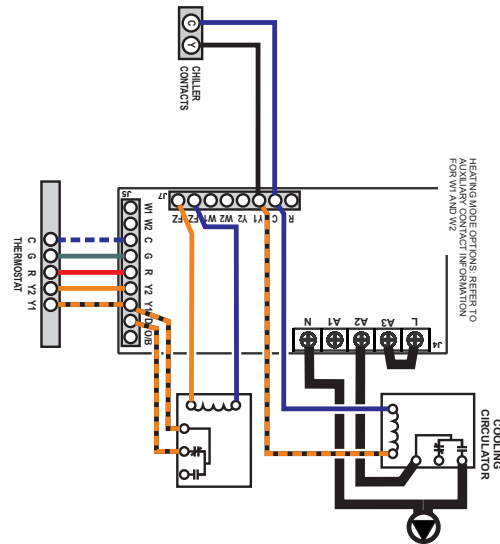


1 Stage Cooling (Only) c/w chilled water circulator

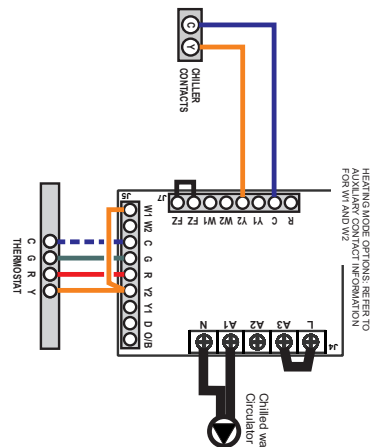


HEAT PUMP C/W CONDENSER DEFROST CYCLE - BOILER BACK-UP

1 Stage Cooling 2 Stage Heating Heat pump c/w condenser defrost cycle

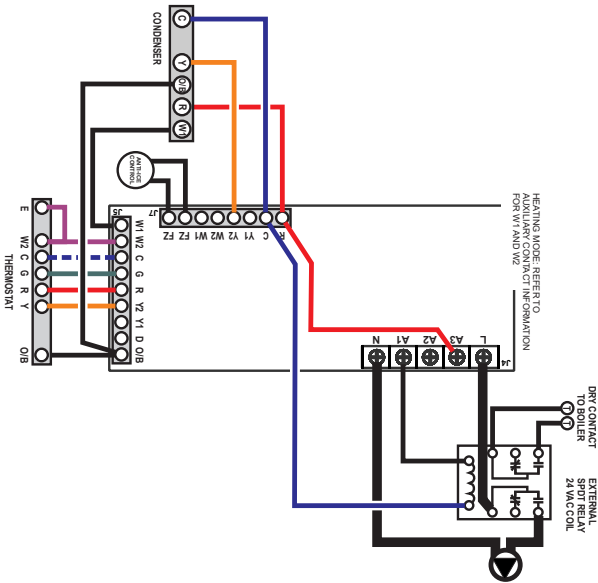

2 Stage Cooling 3 Stage Heating Heat pump c/w condenser defrost cycle

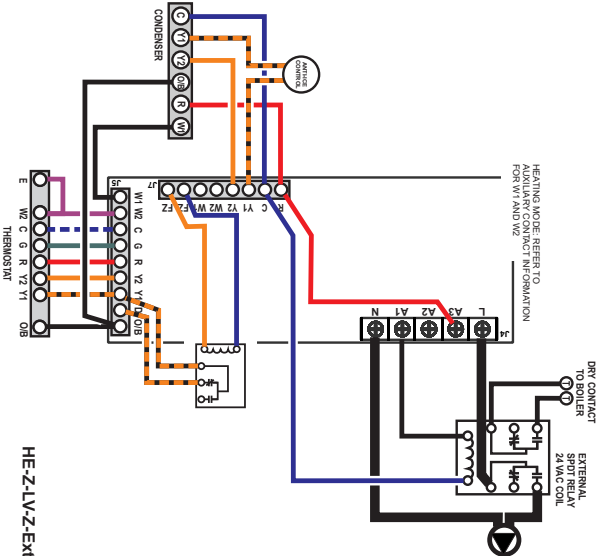


HE-Z-LV-Z-Extended-Wiring-Pg-2-082615

HE-Z Air Handler - Extended Wiring Diagrams


Extended wiring diagrams for the various applications the Hi-Velocity HE-Z model can be used for. If you do not find the wiring configuration you require, please call the technical department at Energy Saving Products Ltd. for further assistance.

HEAT PUMP C/W CONDENSER DEFROST CYCLE ELECTRIC BACK-UP


2 Stage Cooling 3 Stage Heating (Electric) Heat pump c/w condenser defrost cycle

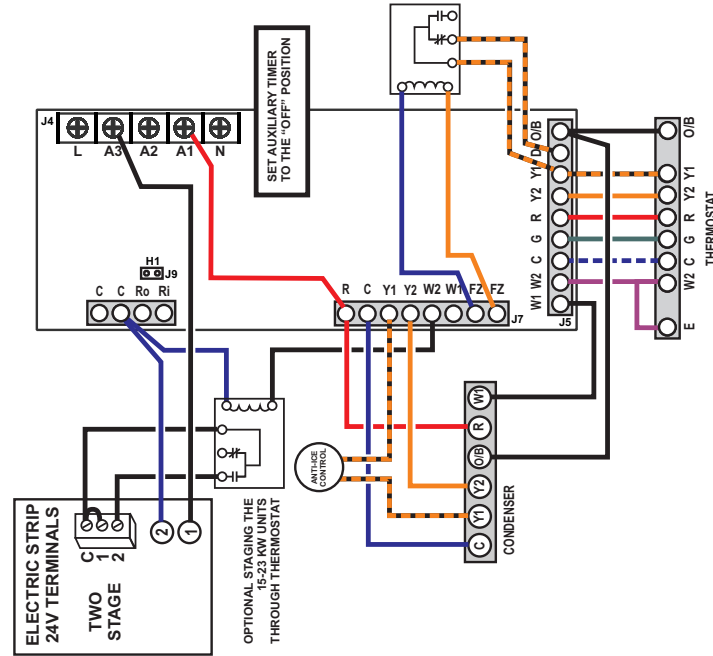

1 Stage Cooling 2 Stage Heating (Electric) Heat pump c/w condenser defrost cycle

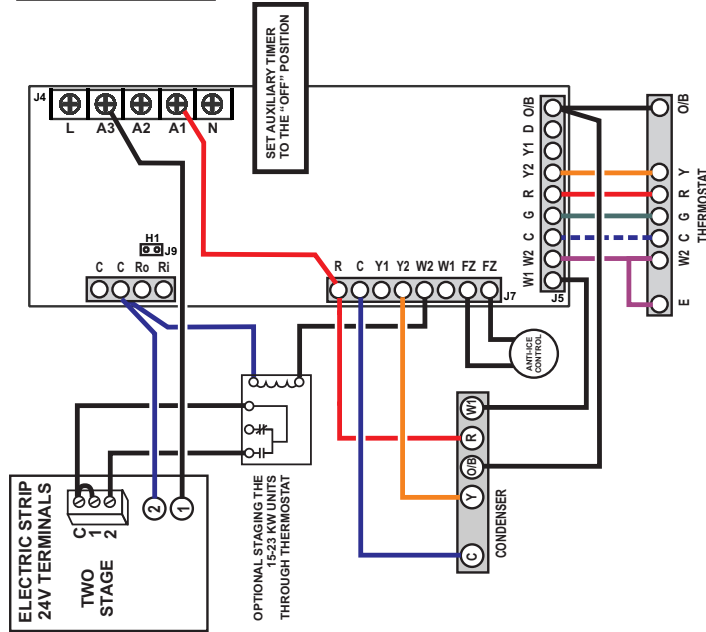


WIRING FOR ELECTRICAL STRIP HEATER (ESH) 1 Stage Heating

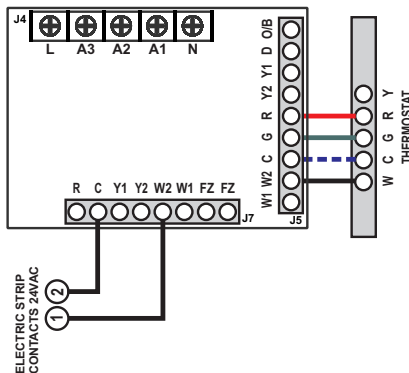


OPTIONAL THROUGH OUT DOOR THERMOSTAT STAGING THE 15-23 KW UNITS


For optional energy savings install a outdoor thermostat to limit the use of the second stage of the ESH. For example - 2 staging the electric strip interrupt "C" and "1" or "C" and "2" with a outdoor stat as shown below. This allows single stage of the two banks of the electric strip to activate, the second stage will be allowed to activate by the outdoor stat.

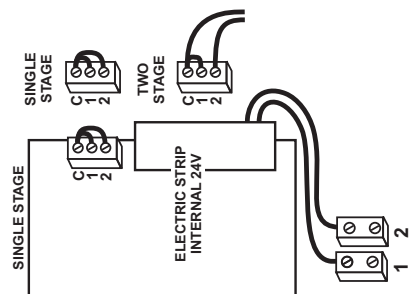


Troubleshooting - Motor Running Too Slow

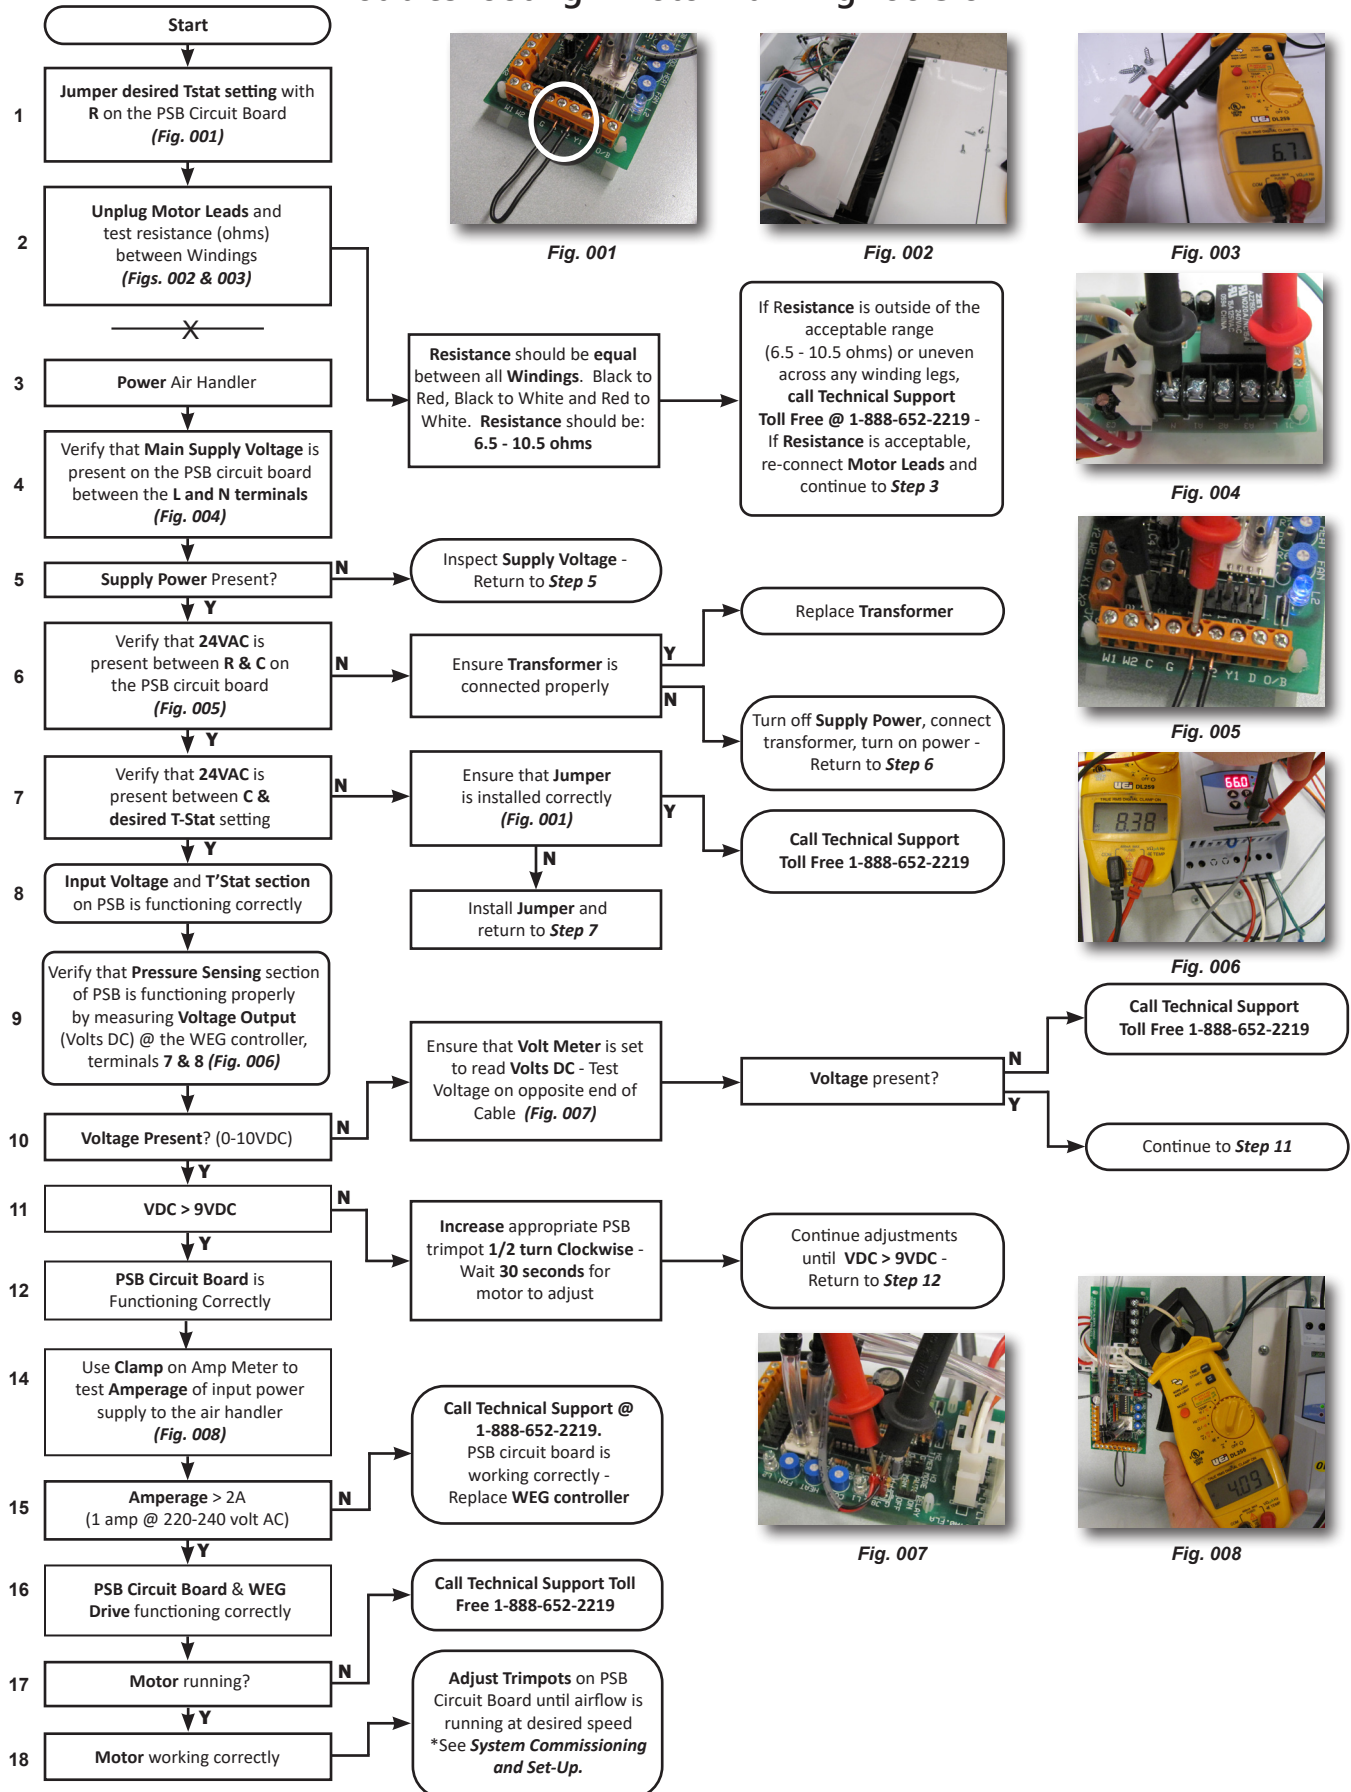


Troubleshooting - Motor Not Running

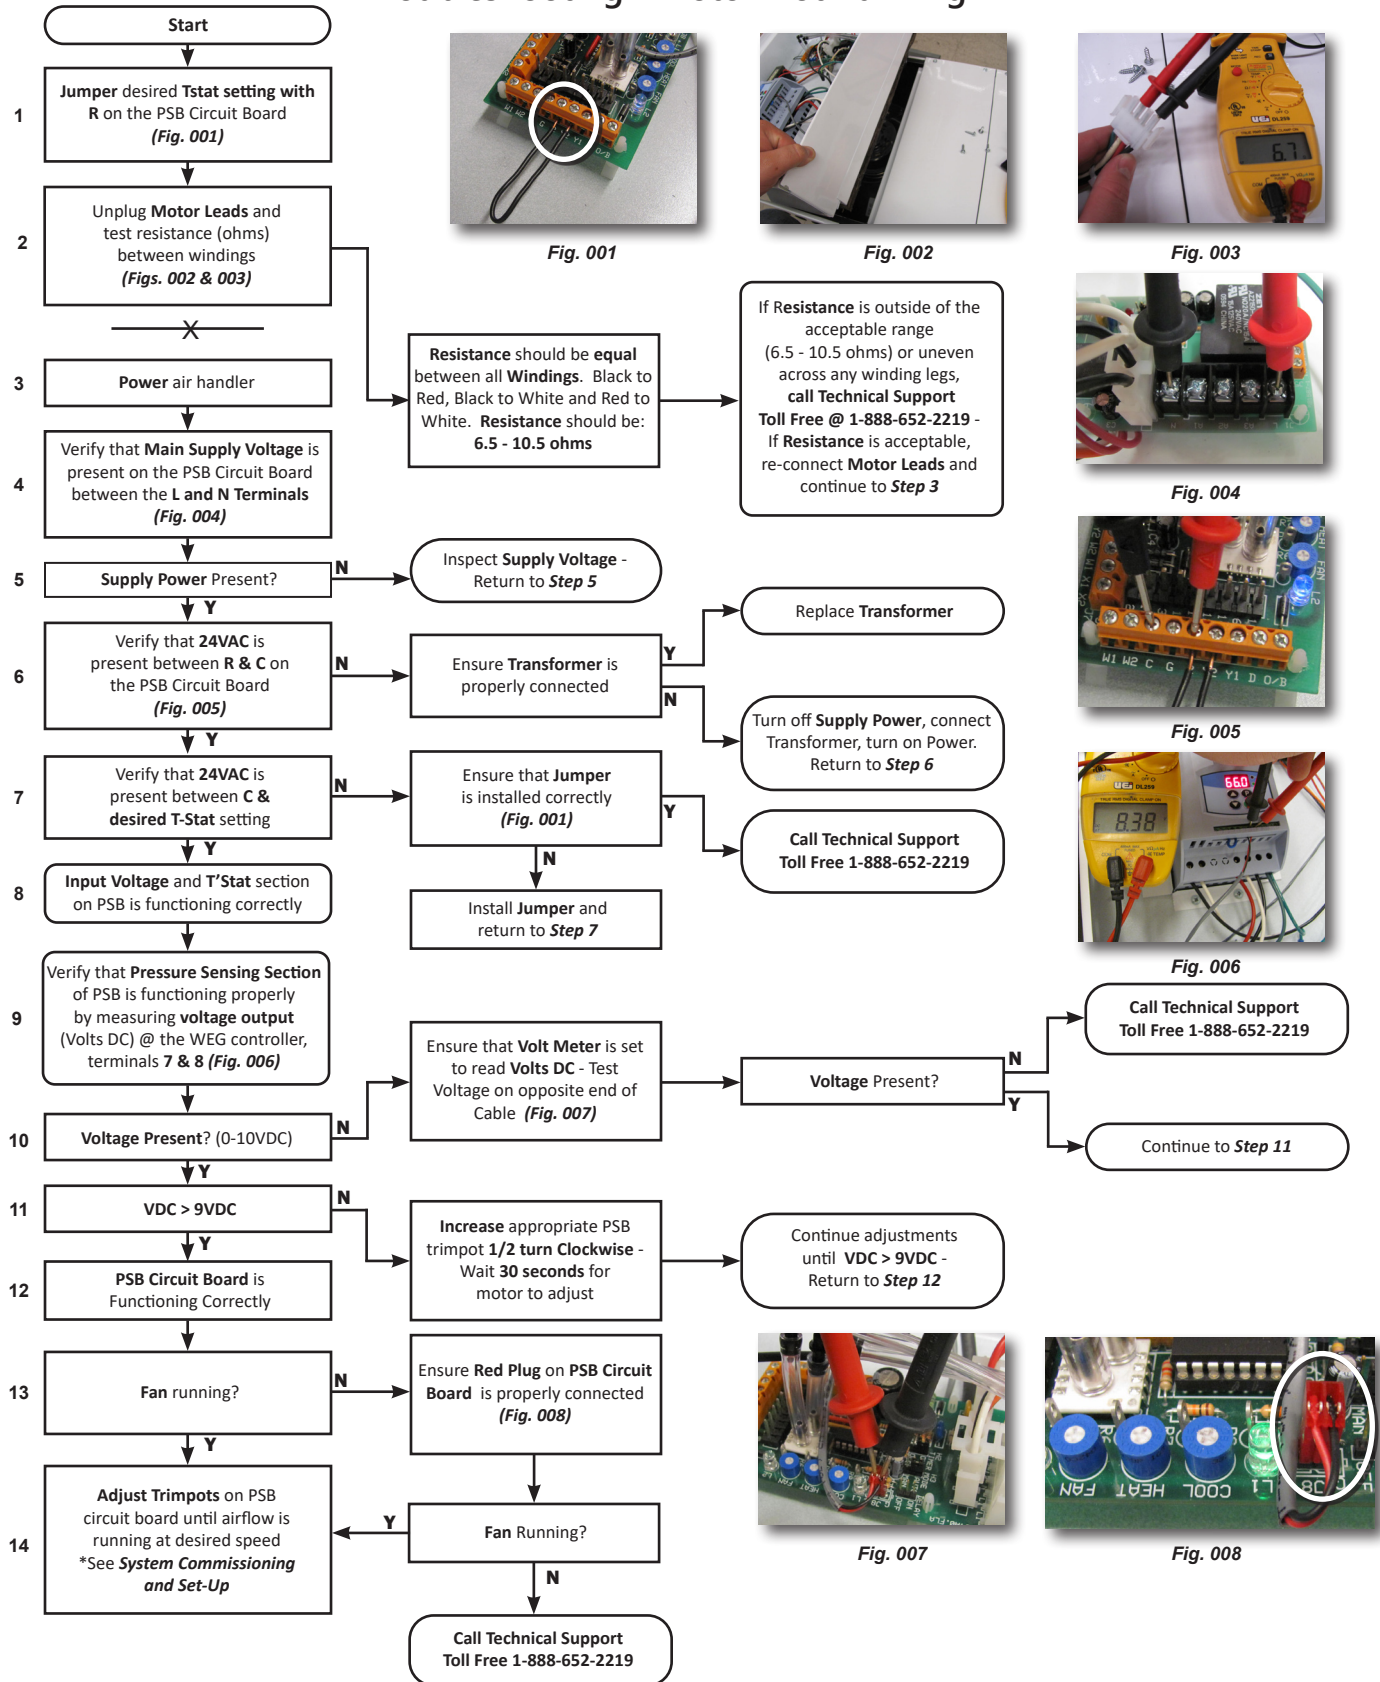


Troubleshooting - 24Volt Thermostat to PSB Circuit Board

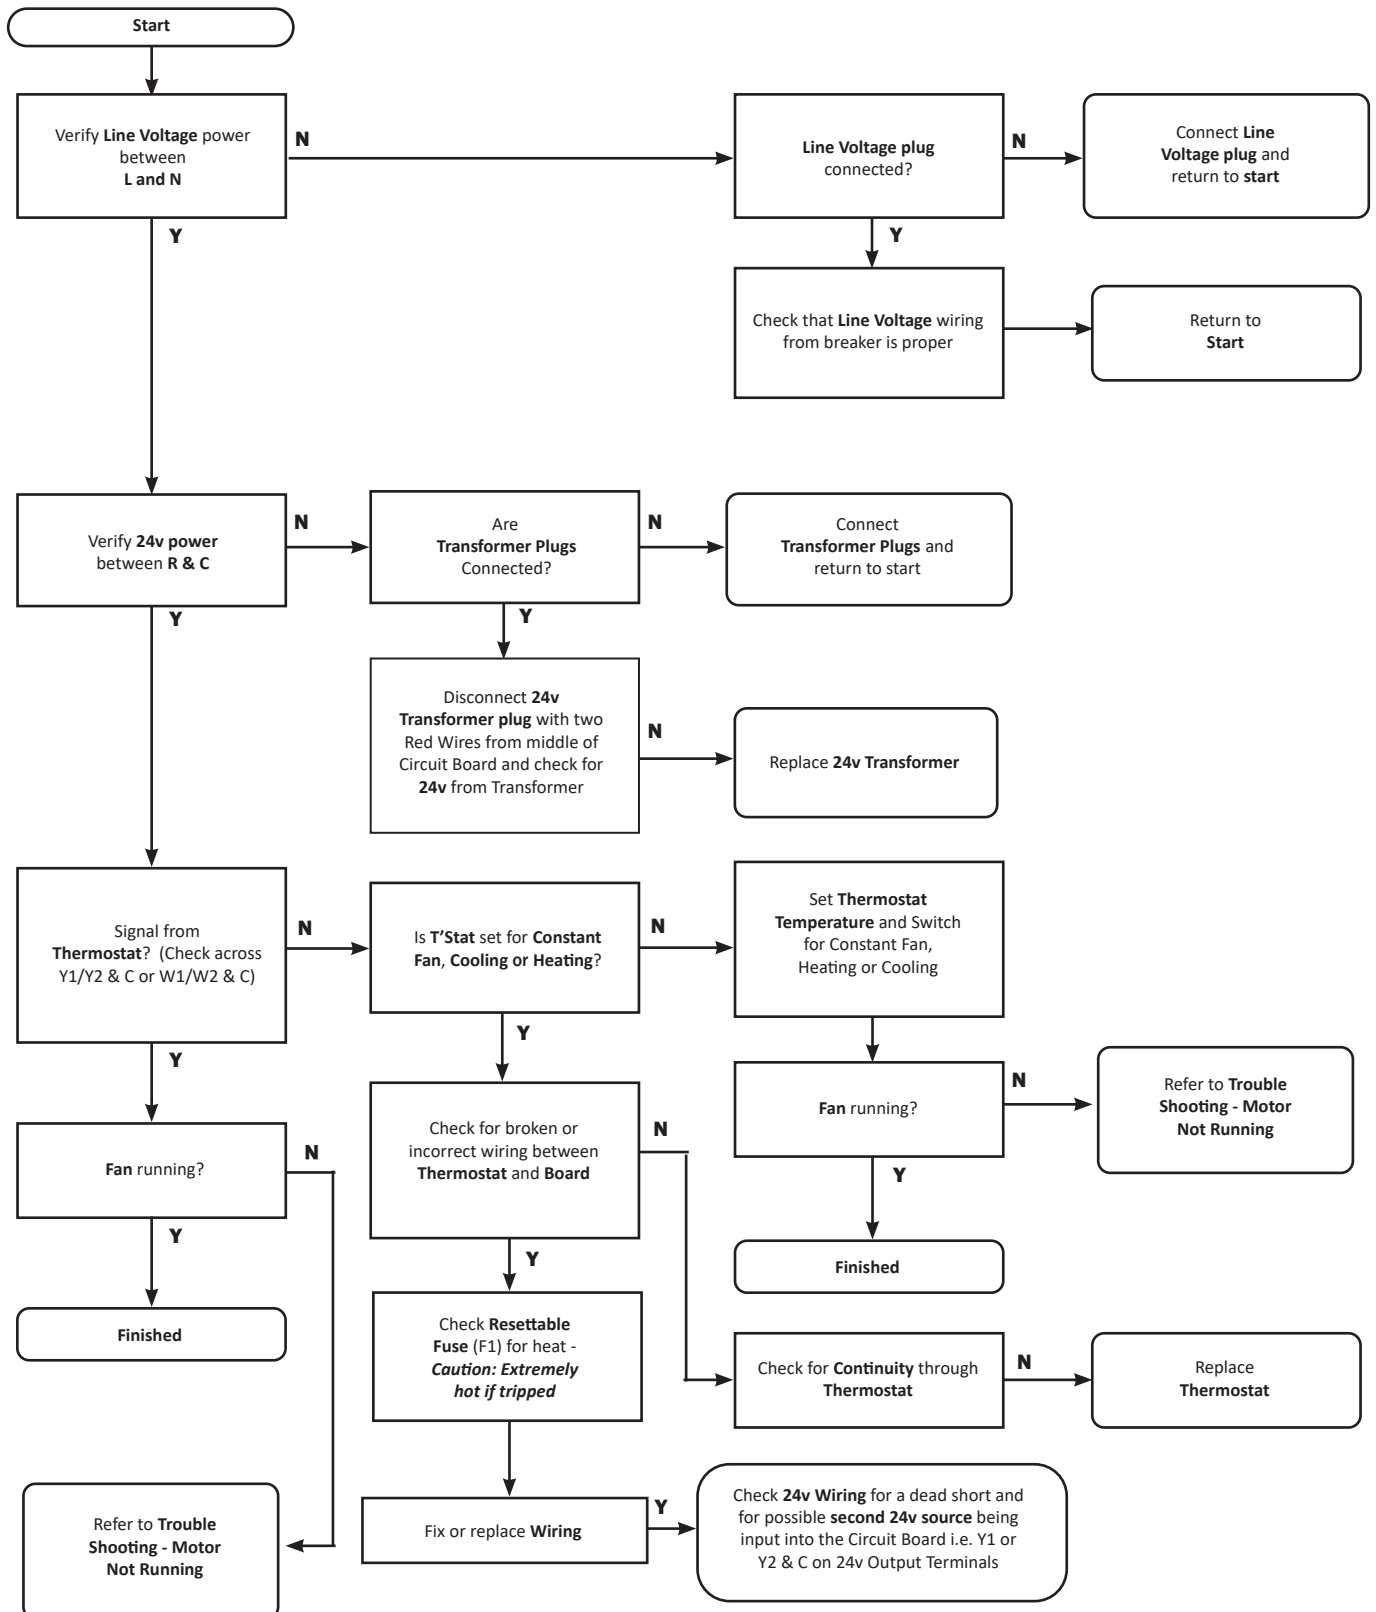


Troubleshooting - Cooling 24 Volt Circuit Board

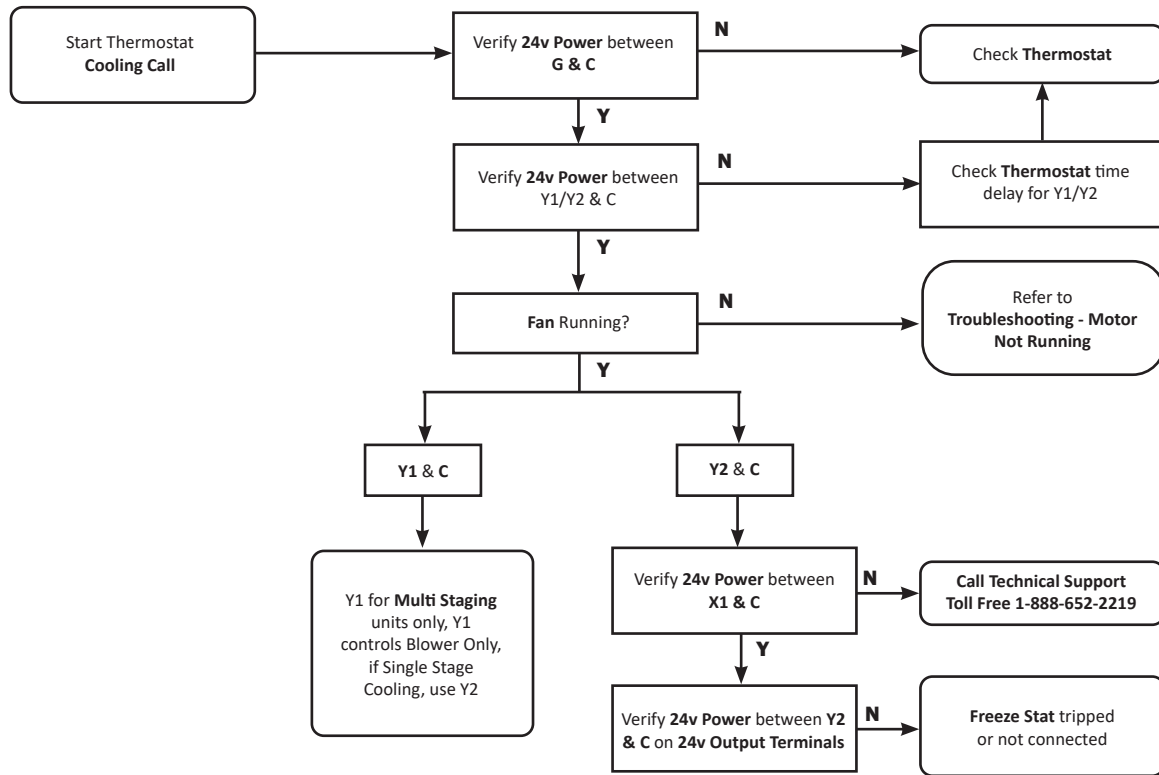

Trouble Shooting: Heating 24 Volt Circuit Board

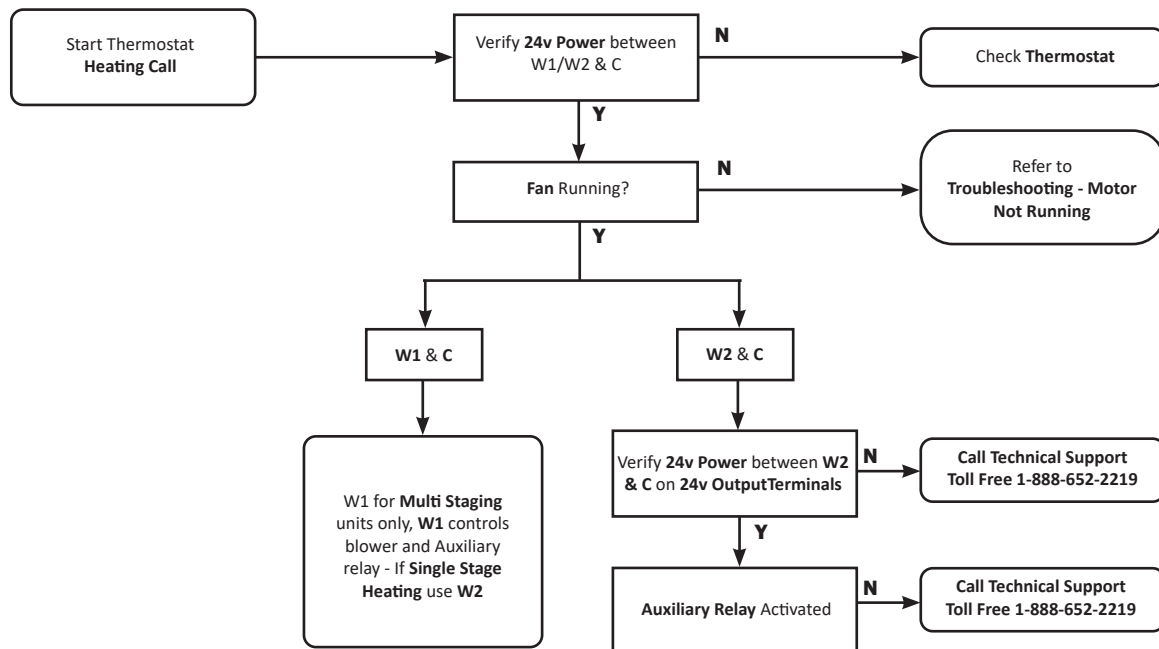

Troubleshooting - Outdoor Unit - Electrical

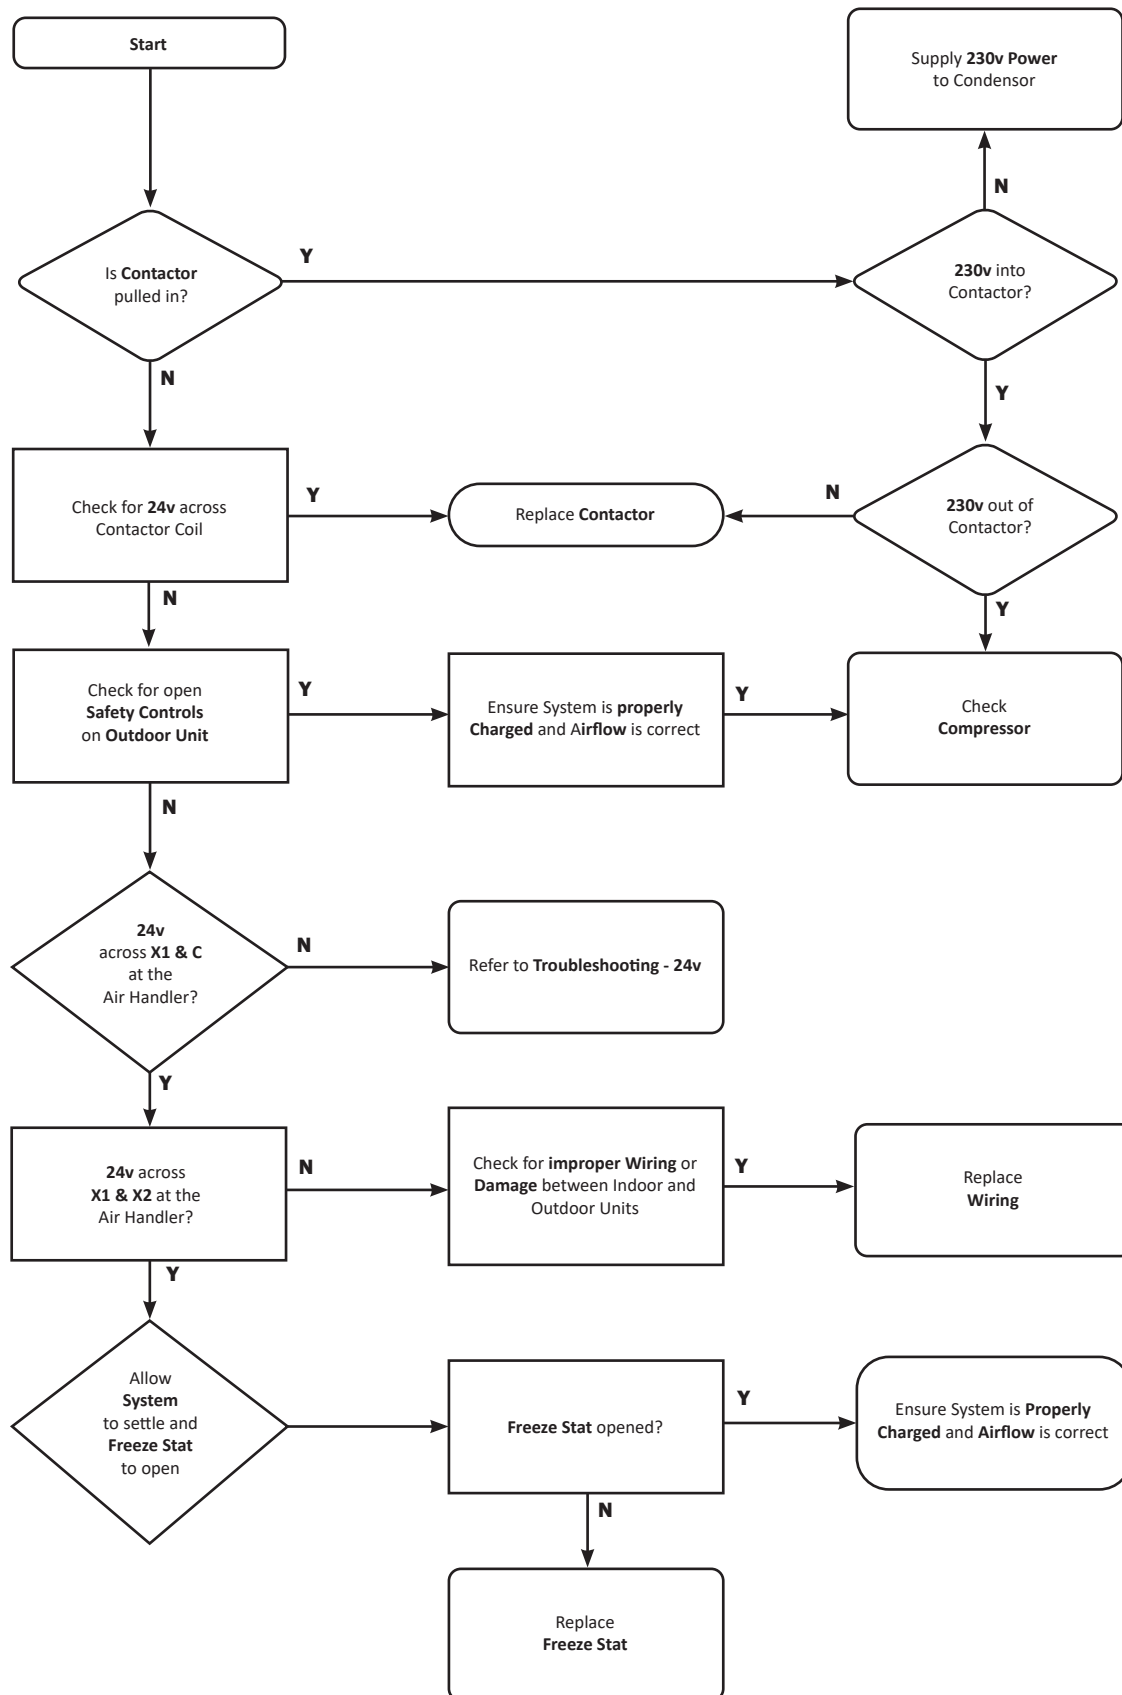

Energy Saving Products Ltd, established in 1983, manufactures the Hi-Velocity Systems™ product line for residential, commercial and multi-family markets. Our facilities house Administration, Sales, Design, Manufacturing, as well as Research & Development complete with an in-house test lab. Energy Saving Products prides itself on Customer Service and provides design services and contractor support.


For all of your Heating, Cooling and Indoor Air Quality needs, the Hi-Velocity System is the right choice for you!



Small Duct Heating, Cooling and IAQ Systems

Build Smart, Breathe *Easy*

Hi-Velocity HE-Z Air Handlers, *Green* Technology

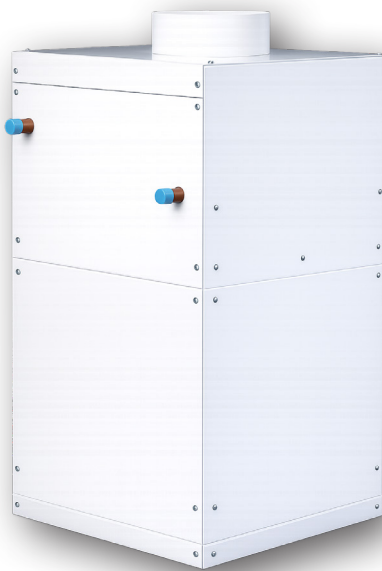

Phone: 780-453-2093

Fax: 780-453-1932

Toll Free: 1-888-652-2219

www.hi-velocity.com